

PIR Motion Sensor

5in1

User Manual





Thank you for your support
Please read the user manual carefully before operating.
Please keep the user manual for future reference.

Technical Parameters

- Motion detection
- Temperature and humidity detection
- Measure the light sensitivity
- Range: up to 50m outdoor, up to 30m indoor
- Battery: CR123A 3V*2
- USB power: 5V/1A
- Standby current: 38uA
- Work Current: 15mA
- Detect range: 10M
- Detect angle: 120°
- Radio Protocol: Z-Wave
- Radio Frequency: 868.4MHz EU; 908.4MHz US; 921.4MHz ANZ; 869.2MHz RU
- Operation temper: 0-40°C
- Size (D x W x H): 68mm x 56mm x 56mm



Product Configuration

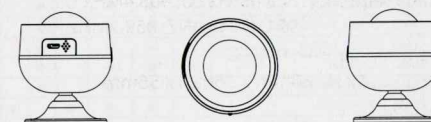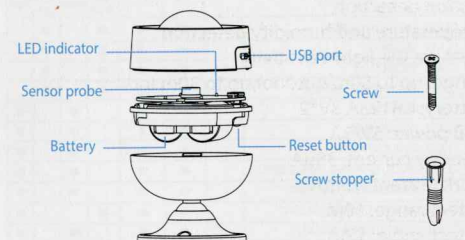

Working Condition

If there is someone moving within the detection area, alarm triggered, and LED lights flash in the inductive area at the same time.

Work schematic diagram of PIR shown in the following picture

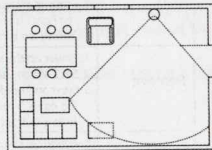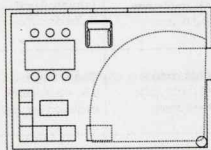

Network Configuration

Z-Wave Network Inclusion/Exclusion/Reset

There is one button in the back side of the sensor, it can be executed inclusion, exclusion and reset from Z-Wave network.

Add ¹	1. Power up the device. 2. Set Z-Wave Controller into inclusion mode 3. Press and hold the button for 5s until white led lights is on, then release the button before led turn off.	Blue led will blink with 1s interval until inclusion successful.
Remove	1. Power up the device. 2. Set Z-Wave Controller into inclusion mode 3. Press and hold the button for 5s until white led lights is on, then release the button before led turn off.	Blue led will blink with 0.5s interval until exclusion successful.
Factory Reset ²	1. Power up the device. 2. Press and hold the button for 10s until pink led lights is on, then release the button before led turn off.	
Product Test Mode	1. Press and hold the button. 2. Power on the device, device will enter into factory product test mode with white light blink one time.	
Send NIF ³	Press and hold the button for 5s until white led lights is on, then release the button before led turn off.	

Notice 1: When device enters into inclusion mode, the device all functionality will be useless. The inclusion mode will be timeout after 30s, user can implement step 3 to terminate inclusion mode.

Notice 2: Factory Reset will clear the device all Z-Wave Network data (include home id, node id, etc...) saved in memory, and restore all configuration parameters to factory default. Please use this procedure only when the network primary controller is missing or otherwise inoperable.

The status of LED

LED Color	Led Display Status	Description
Red	Light On 1s When Power On	Not Add in Z-Wave Network
	Fast Blinks	Cover is Removed
Pink	Light On 2s	Press And Hold Button 10s, Off at 12th Second
	Blink One Time	Motion is Detected
Green	Light On 1s When Power On	Add in Z-Wave in Network Already
White	Light On 2s	Press And Hold Button 5s, Off at 7th Second
Cyan	Blink One Time	Cover is Closed
Blue	Blink with 1s Interval	Add to Z-Wave Network
	Blink with 500ms Interval	Remove from Z-Wave Network
Yellow	Blink with 500ms Interval	OTA is Running
	Light On Always	Button Pressed and Held Time Large Than 12s.

The device supports 2 association groups, and each group supports max 5 associated nodes.

Group 1 is lifeline group; all nodes which associated in this group will receive the messages sent by device through lifeline.

Group 2 is controlling group, all nodes associated in this group will be controlled through BASIC_SET command by the device when device detects a movement event.

The Command Class supported by each association group is shown in the table below:

Group	Command Class	Command
1 (Lifeline)	COMMAND_CLASS_NOTIFICATION COMMAND_CLASS_SWITCH_BINARY COMMAND_CLASS_SENSOR_MULTILEVEL COMMAND_CLASS_BATTERY COMMAND_CLASS_DEVICE_RESET_LOCALLY	NOTIFICATION_REPORT SENSOR_BINARY_REPORT SENSOR_MULTILEVEL_REPORT BATTERY_REPORT DEVICE_RESET_LOCALLY_NOTIFICATION
2 (Control)	COMMAND_CLASS_BASIC	BASIC_SET

06

Advanced Configuration

The device supports the controller to configure parameters of the device through Configuration Command Class, and the device has 18 parameters available for users to set according to their different needs:

1. Led Indicator Enable

This parameter is configured the Led light on disable or enable. '1' – Enable Led Blink when device detects a motion event.

'0' – Disable led blink. This configuration is not affect inclusion, exclusion and reset.

Parameter Number	Size (Byte)	Available Settings	Default value
1	1	0, 1	1

2. Motion Enable

This parameter is configured the motion detected if enable or not. '0' – Motion detected disable.

'1' – Motion detected enable.

Parameter Number	Size (Byte)	Available Settings	Default value
2	1	0, 1	1

3. Motion Alarm Once Enable

This Parameter is configured the motion detected event report one time before motion event cleared. '0' – Motion event alarm will be reported when motion event is detected every time.

'1' – Motion event alarm report only once before motion event cleared.

09

Once the device detects a movement, it will report the event to the controller and current light intensity value will be followed.

In default, device will use COMMAND_CLASS_NOTIFICATION to represent the motion event. User can also enable COMMAND_CLASS_SENSOR_BINARY report by setting the "Configuration No. 5" to '1'.

Notification Report

Motion Detector

When device detects a motion event, it will automatically send the notification report to nodes associated in lifeline.

Command Class	COMMAND_CLASS_NOTIFICATION
Command	NOTIFICATION_REPORT
Type	HOME_SECURITY (0x07)
Event	Motion Detected Motion Cleared
	HOME_SECURITY_MOTION_DETECTION_UNKNOWN_LOCATION (0x08) HOME_SECURITY_NO_EVENT (0x00)

Cover Removed Detector

Command Class	COMMAND_CLASS_NOTIFICATION
Command	NOTIFICATION_REPORT
Type	HOME_SECURITY (0x07)
Event	Cover Removed
	TAMPERING_COVERING_REMOVED (0x08)

Multilevel Sensor Report

This device embeds in a digital light sensor and a digital temperature sensor. The device measures the ambient light intensity and temperature with a certain time interval that decides by **Configuration No. 17**.

07

Parameter Number	Size (Byte)	Available Settings	Default value
3	1	0, 1	1

4. Luminance Associated Enable

'1' – Enable current light intensity to associate the motion event, if there has a motion event detected and the current light intensity is less than the settings in Configuration No.16, the device will send a BASIC_SET to nodes associated in Group 2. And if the current light intensity is larger than the settings in Configuration No. 16, the device will not send BASIC_SET to nodes associated in Group 2.

'0' – Light intensity is not associated with motion event.

Parameter Number	Size (Byte)	Available Settings	Default value
4	1	0, 1	0

5. Binary Sensor Report Enable

'1' – Enable sensor binary report when device detects a motion event. '0' – Disable sensor binary report when device detects a motion event.

Parameter Number	Size (Byte)	Available Settings	Default value
5	1	0, 1	0

6. Motion Sensitivity

This parameter is configured the sensitivity that motion detect. This value is larger, the sensitivity is lower, and the distance for motion detecting is closer.

Parameter Number	Size (Byte)	Available Settings	Default value
6	1	0 ~ 15	2

7. Temperature Offset Value

The current measuring temperature value can be add and minus a value by this

10

When the ambient temperature differential over 50lux (in default, and decides by configuration No. 11), the device will unsolicited to send a "SENSOR_MULTILEVEL_REPORT" to nodes which associated in lifeline.

Command Class	COMMAND_CLASS_SENSOR_MULTILEVEL
Command	SENSOR_MULTILEVEL_REPORT
Type	Luminance
Scale	Lux

Temperature Sensor

When the ambient temperature differential over 1°C (in default, and decides by **Configuration No. 9**), the device will unsolicited to send a

"SENSOR_MULTILEVEL_REPORT" to nodes which associated in lifeline.

Command Class	COMMAND_CLASS_SENSOR_MULTILEVEL
Command	SENSOR_MULTILEVEL_REPORT
Type	Air Temperature
Scale	Fahrenheit(US) / Celsius(Other Region)

Humidity Sensor

When the ambient humidity differential over 2RH% (in default, and decides by Configuration No. 10), the device will unsolicited to send a "SENSOR_MULTILEVEL_REPORT" to nodes which associated in lifeline.

Command Class	COMMAND_CLASS_SENSOR_MULTILEVEL
Command	SENSOR_MULTILEVEL_REPORT
Type	Humidity
Scale	RH%

08

setting. Temperature Offset Value = [Value] × 0.1 Degree Celsius / Fahrenheit (US).

Parameter Number	Size (Byte)	Available Settings	Default value
7	1	-120 ~ 120	0

8. Humidity Offset Value

The current measuring humidity value can be add and minus a value by this setting. Humidity Offset Value = [Value] × 0.1 RH%.

Parameter Number	Size (Byte)	Available Settings	Default value
8	1	-120 ~ 120	0

9. Temperature D-Value Setting

This configuration sets the changed value of the temperature. When the difference from the last report exceeds this setting value, the device will report current temperature value to Z-Wave Hubs. The D-Value = [Value] × 0.1 Degree Celsius / Fahrenheit (US).

Parameter Number	Size (Byte)	Available Settings	Default value
9	1	0 ~ 120	10

10. Humidity D-Value Setting

This configuration sets the changed value of the humidity. When the difference from the last report exceeds this setting value, the device will report current humidity value to Z-Wave Hubs.
The D-Value = [Value] × 0.1RH%.

Parameter Number	Size (Byte)	Available Settings	Default value
10	1	0 ~ 120	20

11. Luminance D-Value Setting

This configuration sets the changed value of the luminance. When the difference

11

from the last report exceeds this setting value, the device will report current luminance value to Z-Wave Hubs. Unit: Lux.

Parameter Number	Size (Byte)	Available Settings	Default value
11	1	0 ~ 120	50

12. Basic Set Level

This parameter is configured the value that BASIC_SET for nodes that associated in Group 2. '100' – BASIC_SET = 0xFF (ON).

'0' – BASIC_SET = 0x00 (OFF).

Parameter Number	Size (Byte)	Available Settings	Default value
12	1	0 ~ 100	100

13. Motion Blind Time

This parameter is configured the time interval between two motion events triggered, during this period the motion detector will not be triggered even there has someone move in front of motion detector. Unit: Second.

Parameter Number	Size (Byte)	Available Settings	Default value
13	1	1 ~ 8	8

14. Basic Set Off Delay Time

This Parameter is configured the time delay for device sending BASIC_SET = 0x00 to nodes that associated in Group 2 when device detects a motion event.
[0] – Not Send BASIC_SET = 0x00 Command.

[1 ... 30000] – Time delay count. Unit: Second.

Parameter Number	Size (Byte)	Available Settings	Default value
14	2	0 ~ 30000	30

12

15. Motion Clear Time

This parameter is configured the time to clear motion event after a motion event detected. Time to motion clear, the device will send a clear event report to controller. Unit: Second.

Parameter Number	Size (Byte)	Available Settings	Default value
15	2	1 ~ 30000	30

16. Luminance Threshold for Associated

This parameter is configured the light intensity threshold. When Ambient light intensity is less than this setting, device will consider the current environment is insufficient light. If "Configuration No. 3" is set '1' and a motion event is detected, the device will send a BASIC_SET to the nodes which associated in Group 2. Unit: 1Lux.

Parameter Number	Size (Byte)	Available Settings	Default value
16	2	0 ~ 1000	50

17. Sensor Measuring Interval

This parameter is configured the time interval for light sensor, temperature and humidity sensor measuring. This value is larger, the battery life is longer. And the sensors values changed are not obvious. 0 – All sensors are disabled. Unit: Second

Parameter Number	Size (Byte)	Available Settings	Default value
17	2	0 ~ 30000	180-LPM or 10-AOS

18. Light Intensity Offset Calibration

This parameter defines the calibrated scale for ambient light intensity. Because the method and position that the sensor mounted and the cover of sensor will bring measurement error, user can get more real light intensity by this parameter

13

setting. User should run the steps as blows for calibrating

1. Set this parameter value to default (Assumes the sensor has been added in a Z-Wave Network).

2. Place a digital luxmeter close to sensor and keep the same direction, monitor the light intensity value (Vm) which report to controller and record it. The same time user should record the value (Vs) of luxmeter.

3. The scale calibration formula: $k = V_m / V_s$.

4. The value of k is then multiplied by 1000 and rounded to the nearest whole number.

5. Set the value getting in 5) to this parameter, calibrate finished.

For example, $V_m = 300$, $V_s = 2000$, then $k = 300 / 2600 = 0.11538$

$k = 0.11538 * 1000 = 115.38 \approx 115$

The parameter should be set to 115.

Parameter Number	Size (Byte)	Available Settings	Default value
99	2	1 ~ 32767	5320

14

Wakeup Command Class

The device stays in sleep status for the majority of time in order to conserve battery life. The minimum wakeup interval is 20s

The maximum wakeup interval is 86400s (24 Hours)

Allowable min step among each wakeup interval is 10 seconds, such as 1860s, 1870s, 1880s...

Note: The default value is 8 hours with factory default. This value is greater, the battery life is longer.

Battery Command Class

The users can also enquire the battery status of the device by sending BATTERY_GET command. Once the device receives the command, it will return BATTERY_REPORT command.

The device will send BATTERY_LEVEL = 0xFF command to the Z-Wave Controller to inform that the device is in dead battery status, otherwise BATTERY_LEVEL value range is 0% to 100%.

Command Class Basic

The COMMAND_CLASS_BASIC is realized to control the devices associated in Group 2 in this motion detector.

When device detects a motion event occurred, it will send a "BASIC_SET = [Value]" command to control the devices in Group 2.

And it will send a "BASIC_SET = 0x00" command to control the devices in Group 2 after the motion event is cleared. The [Value] is set by **configuration No.12**.

15

Smart Start

SmartStart enabled products can be added into a Z-Wave network by scanning the Z-Wave QR Code present on the product with a controller providing SmartStart inclusion. No further action is required and the SmartStart product will be added automatically within 10 minutes of being switched on in the network vicinity.

This device supports SmartStart function. QR code printed by laser can be found on surface of product and the outside of packing box. And the full DSK code is printed can be found on the packing box.

The device will enter SmartStart if the device is not included in network after power up. And then

2nd SmartStart time delay approximately 16s

3rd SmartStart time delay approximately 32s

4th SmartStart time delay approximately 64s

5th SmartStart time delay approximately 128s

6th SmartStart time delay approximately 256s

7th SmartStart time delay approximately 512s

Afterwards, the Smartstart mode will be auto running with 512 second interval until device is included successfully or battery run down.

16

Command List When LPM Included

Command Class	Version	Not Included	Non-secure Included	Non-secure Not Included	S0 Included	S2 Included
COMMAND_CLASS_ZWAVEPLUS_INFO	2	●	●	●	●	●
COMMAND_CLASS_SECURITY	1	●	●	●	●	●
COMMAND_CLASS_SECURITY_2	1	●	●	●	●	●
COMMAND_CLASS_TRANSPORT_SERVICE	2	●	●	●	●	●
COMMAND_CLASS_VERSION	3	●	●	●	●	●
COMMAND_CLASS_POWERLEVEL	1	●	●	●	●	●
COMMAND_CLASS_ASSOCIATION	2	●	●	●	●	●
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION	3	●	●	●	●	●
COMMAND_CLASS_ASSOCIATION_GRP_INFO	1	●	●	●	●	●
COMMAND_CLASS_MANUFACTURER_SPECIFIC	2	●	●	●	●	●
COMMAND_CLASS_DEVICE_RESET_LOCALLY	1	●	●	●	●	●
COMMAND_CLASS_BATTERY	1	●	●	●	●	●
COMMAND_CLASS_WAKEUP	2	●	●	●	●	●
COMMAND_CLASS_NOTIFICATION	8	●	●	●	●	●
COMMAND_CLASS_SENSOR_MULTILEVEL	11	●	●	●	●	●
COMMAND_CLASS_SENSOR_BINARY	2	●	●	●	●	●
COMMAND_CLASS_INDICATOR	3	●	●	●	●	●
COMMAND_CLASS_CONFIGURATION	4	●	●	●	●	●
COMMAND_CLASS_SUPERVISION	1	●	●	●	●	●
COMMAND_CLASS_FIRMWARE_UPDATE_MD	5	●	●	●	●	●

19

Security Network

The device supports the security function with S2 encrypted communication. The device will auto switch to the security mode when the device included with a security controller. In the security mode, the follow commands must use security and security_2 command class wrapped to communicate, otherwise the device will not response any commands.

Security Keys

This device supports security levels are listed in below table:

Security Levels	Support (Yes/No)
SECURITY_KEY_S0	Yes
SECURITY_KEY_S2_UNAUTHENTICATED	Yes
SECURITY_KEY_S2_AUTHENTICATED	Yes
SECURITY_KEY_S2_ACCESS	No

17

Command List When AOS Included

Command Class	Version	Not Included	Non-secure Included	Non-secure Not Included	S0 Included	S2 Included
COMMAND_CLASS_ZWAVEPLUS_INFO	2	●	●	●	●	●
COMMAND_CLASS_SECURITY	1	●	●	●	●	●
COMMAND_CLASS_SECURITY_2	1	●	●	●	●	●
COMMAND_CLASS_TRANSPORT_SERVICE	2	●	●	●	●	●
COMMAND_CLASS_VERSION	3	●	●	●	●	●
COMMAND_CLASS_POWERLEVEL	1	●	●	●	●	●
COMMAND_CLASS_ASSOCIATION	2	●	●	●	●	●
COMMAND_CLASS_MULTI_CHANNEL_ASSOCIATION	3	●	●	●	●	●
COMMAND_CLASS_ASSOCIATION_GRP_INFO	1	●	●	●	●	●
COMMAND_CLASS_MANUFACTURER_SPECIFIC	2	●	●	●	●	●
COMMAND_CLASS_DEVICE_RESET_LOCALLY	1	●	●	●	●	●
COMMAND_CLASS_NOTIFICATION	8	●	●	●	●	●
COMMAND_CLASS_SENSOR_MULTILEVEL	11	●	●	●	●	●
COMMAND_CLASS_SENSOR_BINARY	2	●	●	●	●	●
COMMAND_CLASS_INDICATOR	3	●	●	●	●	●
COMMAND_CLASS_CONFIGURATION	4	●	●	●	●	●
COMMAND_CLASS_SUPERVISION	1	●	●	●	●	●
COMMAND_CLASS_FIRMWARE_UPDATE_MD	5	●	●	●	●	●

20

Command Classes

All Supports Command Class

This device supports 2 role type: AOS(Always On Slave) and LPM (Low Power Mode). Which role type is valid decided by which power (Battery or DC Power) is supplied when include.

The role type is AOS only if DC power supply first. The role type is LPM only if battery supply first.

When device is included with AOS, it also can make a repeater role.

18

Guarantee

- 1.The Guarantee is provided by our company (hereinafter "Manufacturer")
- 2.The Manufacturer is responsible for equipment malfunction resulting from physical defects (manufacturing or material) for 12 months from the date of its purchasing.
- 3.During the Guarantee period, the Manufacturer shall repair or replace any defects, free of charge.
- 4.In special cases, when the device cannot be replaced with the device of the same type (e.g. the device is no longer available in the commercial offer), the Manufacturer may replace it with a different device which has similar technical parameters as the faulty one. Such activity shall be considered as fulfilling the obligations of the Manufacturer. The Manufacturer shall not refund money paid for the device.
- 5.The guarantee shall not cover:
 - a. mechanical damages (cracks, fractures, cuts, abrasions, physical deformations caused by impact, falling or dropping the device or other object, improper use or not observing the operating manual);
 - b. damages resulting from external causes, e.g.: flood, storm, fire, lightning, natural disasters, earthquakes, war, civil disturbance, force majeure, unforeseen accidents, theft, water damage, liquid leakage, battery spill, weather conditions, sunlight, sand, moisture, high or low temperature, air pollution
 - c. damages caused by malfunctioning software, attack of a computer virus, or by failure to update the software as recommended by the Manufacturer.

All above is for reference only, please see the subject products.